




ROSSIGNOL



MEET JE VOETEN EERST, DIT DOE JE DOOR DE VOLGENDE STAPPEN TE VOLGEN!

1. Leg een vel papier op de vloer tegen een muur.
2. Draag de sokken die je normaal gesproken in je skischoenen zou dragen tijdens het skiën.
3. Sta op het vel papier, zodat je rug plat tegen de muur ligt (voeten loodrecht op de muur) met je hielen tegen de muur.
4. Teken een markering voor je grote teen (de verste voorwaartse van je voet).
5. Meet de afstand tussen de rand van het vel en de getekende markering. Het wordt aanbevolen dit zowel voor de linker- als rechterschoen te doen en rekening te houden met de langere lengte.
6. Om je schoenmaat te weten, pak een liniaal en meet de afstand tussen de muur en de markering. Bekijk vervolgens de onderstaande tabel.

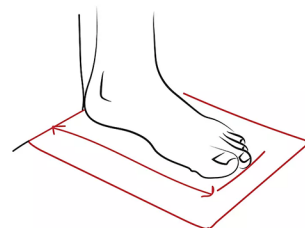

MAATTABEL SKISCHOENEN

SIZE	EU	FOOT (CM)	SIZE	EU	FOOT (CM)
22	34	22	27,5	42,5	27,5
22,5	35	22,5	28	43	28
23	36	23	28,5	44	28,5
23,5	36,5	23,5	29	45	29
24	37	24	29,5	46	29,5
24,5	38	24,5	30	46,5	30
25	39	25	30,5	47	30,5
25,5	39,5	25,5	31	48	31
26	40	26	31,5	48,5	31,5
26,5	41	26,5	32,5	49	32,5
27	42	27	33,5	49,5	33,5



SKISHOPBRABANT



ROSSIGNOL



TAKE YOUR FOOT MEASUREMENTS, THEN CHOOSE THE APPROPRIATE SHOE SIZE:

1. Put a sheet of paper on the floor against a wall.
2. Wear the socks you would normally wear in your shoes.
3. Stand on the sheet so that your back is flat against the wall (foot perpendicular to the wall) with your heels against the wall.
4. Draw a marker in front of your big toe (the furthest forward of your foot).
5. Measure the length between the edge of the sheet and the marker drawn. It is recommended to do this for both the left and right foot and to take into consideration the longer length.
6. To know your shoe size, take a ruler and measure the distance between the wall and the mark you have drawn. Then simply enter it in the corresponding cell in the "foot length" column.



SIZE CHART SKI BOOTS

SIZE	EU	FOOT (CM)	SIZE	EU	FOOT (CM)
22	34	22	27,5	42,5	27,5
22,5	35	22,5	28	43	28
23	36	23	28,5	44	28,5
23,5	36,5	23,5	29	45	29
24	37	24	29,5	46	29,5
24,5	38	24,5	30	46,5	30
25	39	25	30,5	47	30,5
25,5	39,5	25,5	31	48	31
26	40	26	31,5	48,5	31,5
26,5	41	26,5	32,5	49	32,5
27	42	27	33,5	49,5	33,5



SKISHOPBRABANT