

FARAD[®]

made in Italy

BS 059

SSANGYONG ACTYON 2007>

5



I Istruzioni di montaggio

F Instructions de montage

PL Instrukcja montażu

D Einbauanleitung


GB Fitting instructions

E Instrucciones de montaje

NL Inbouwhandleiding


SWE Montageanvisnin

KIT BS

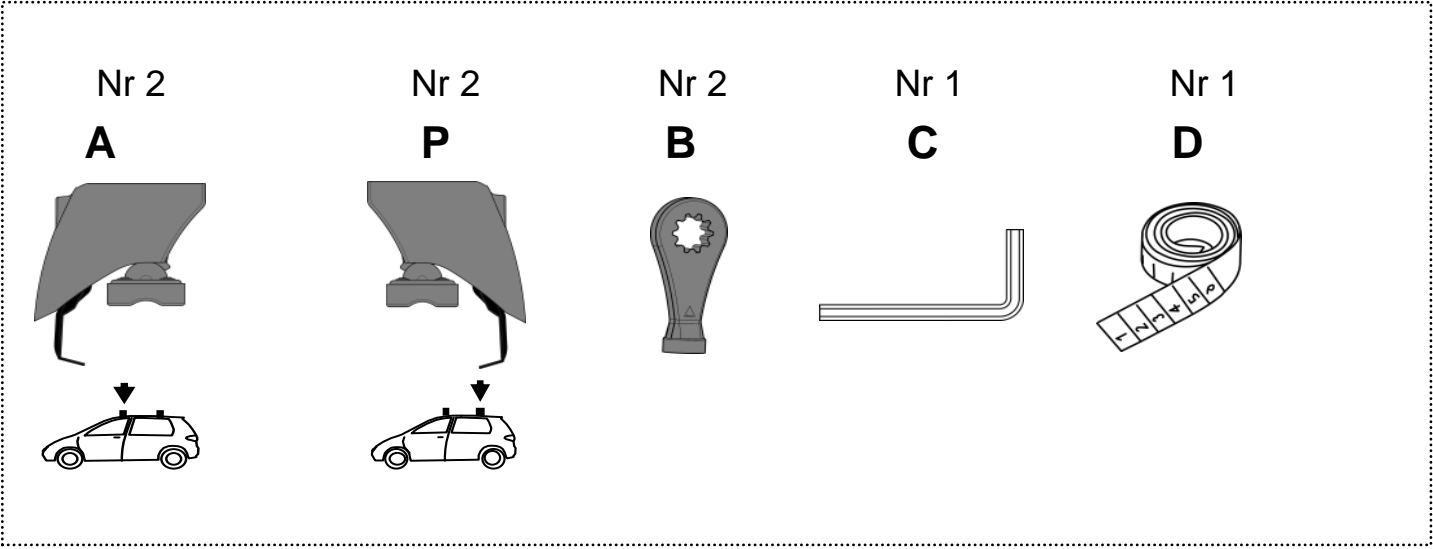











+


KIT ALU

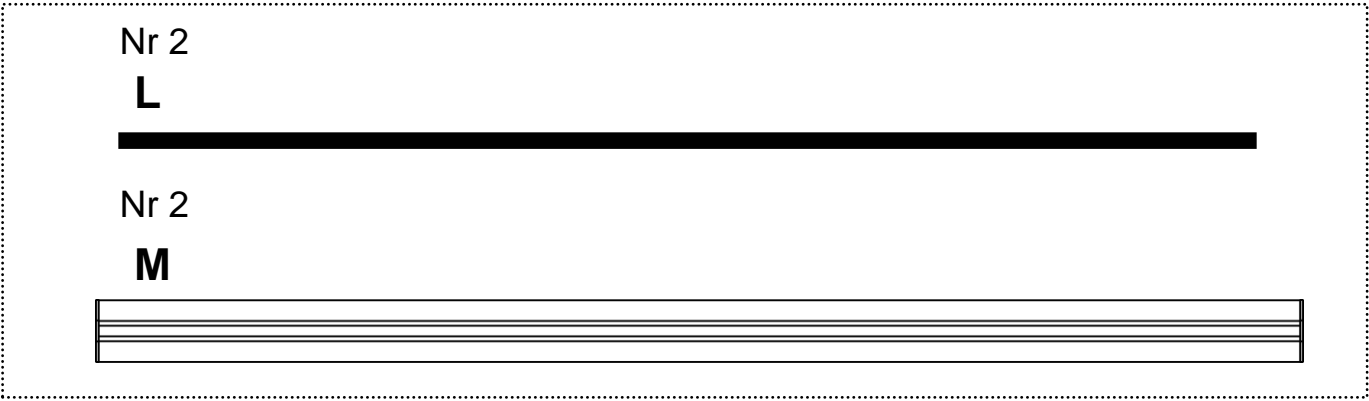




=


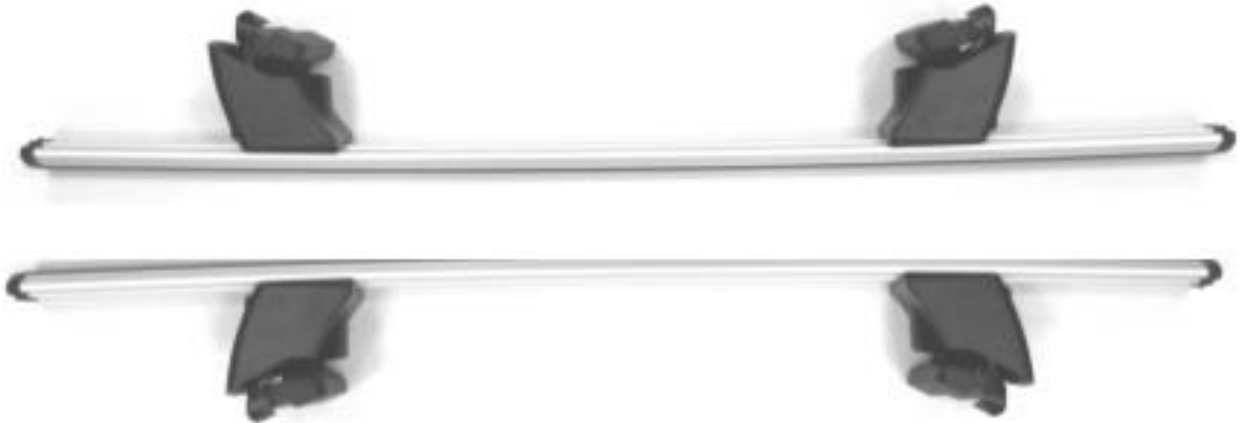


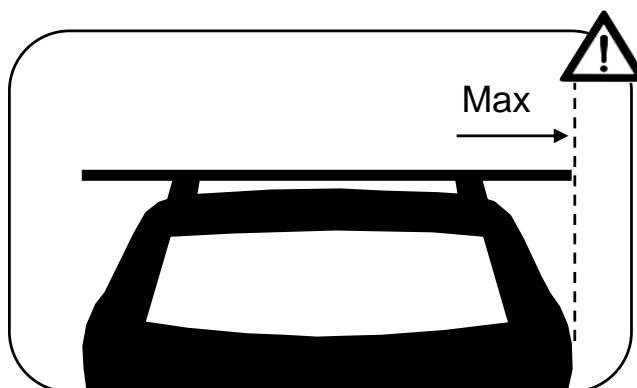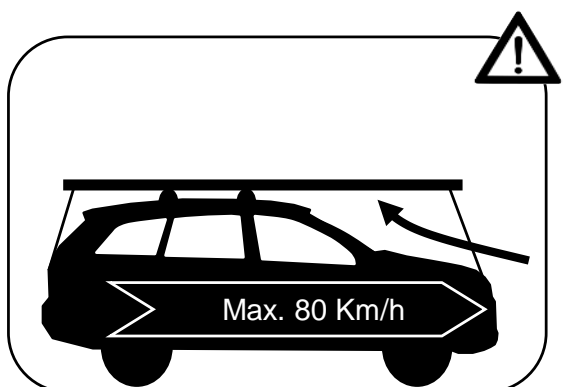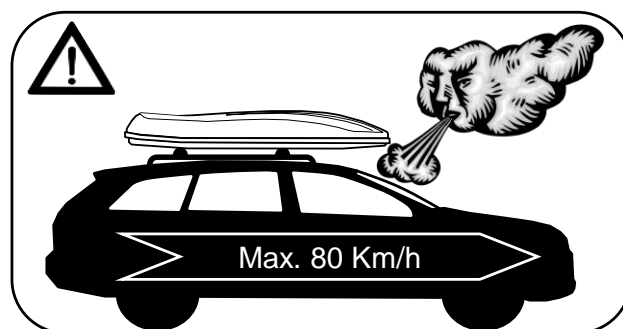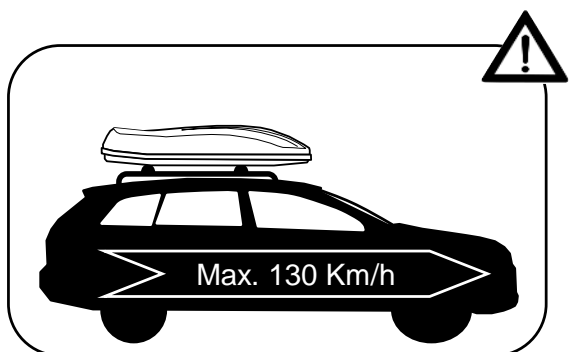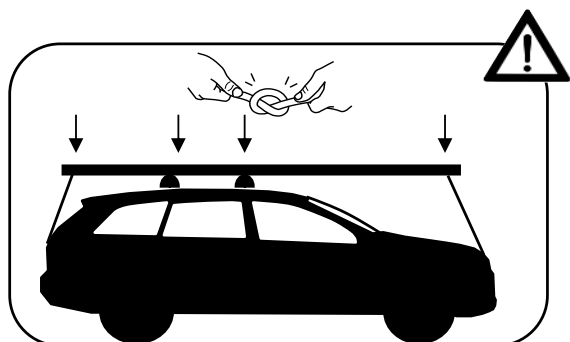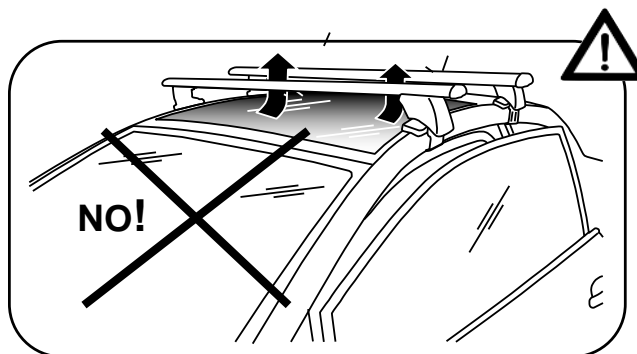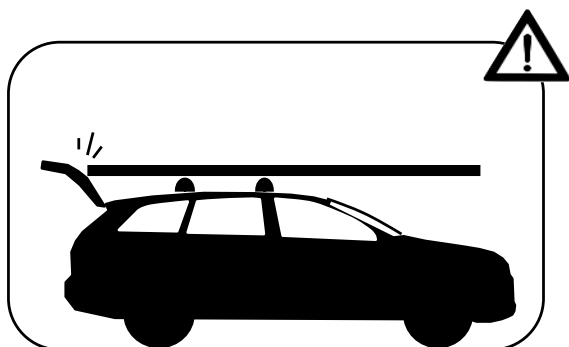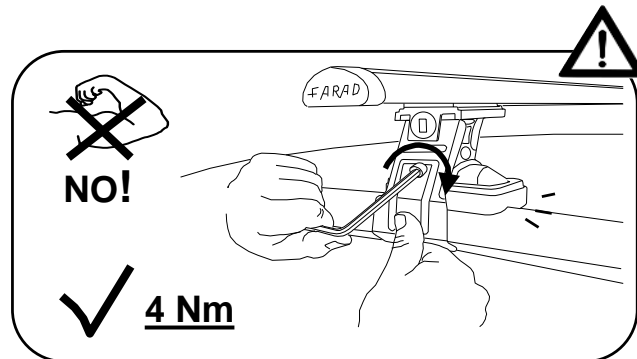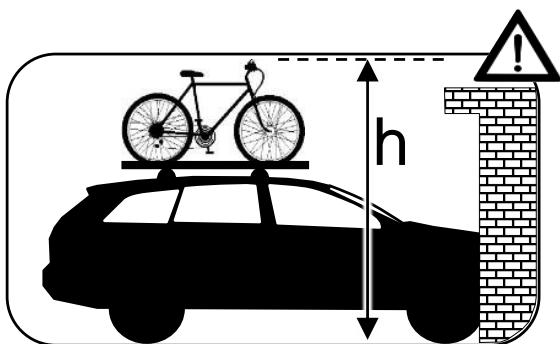

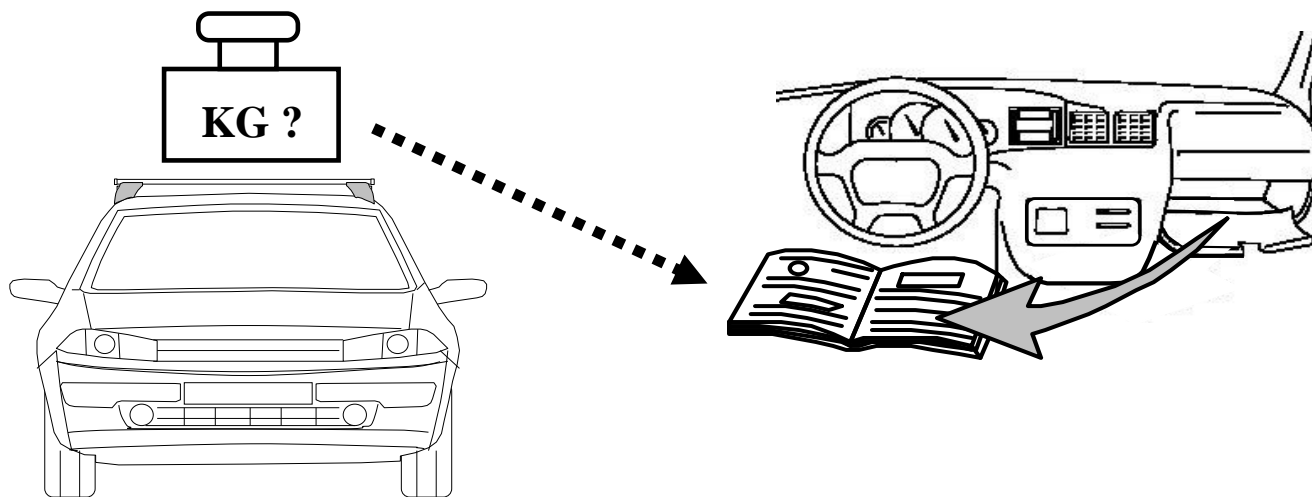


- | | |
|--|---|
| <p>I Controllare carico del tetto sul manuale dell'auto</p> <p>PL Sprawdz ładownoř dachu w instrukcji</p> <p>GB Check roof load capacity in car instruction</p> <p>NL check de handleiding belasting van het dak van de auto</p> | <p>F vřrifier le chargement manuel du toit de la voiture</p> <p>D řberprřfen Sie die manuelle Beladung der Autodach</p> <p>E comprobar la carga manual del techo del coche</p> <p>SWE kontrollera manuellt inlřggning pā taket av bilen</p> |
|--|---|

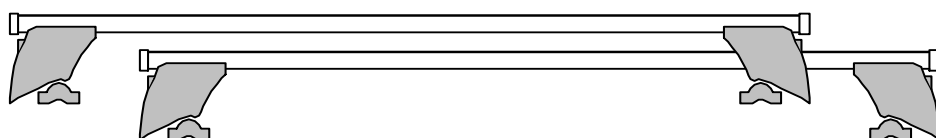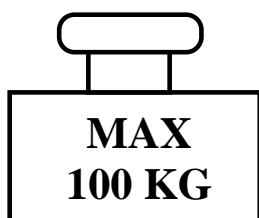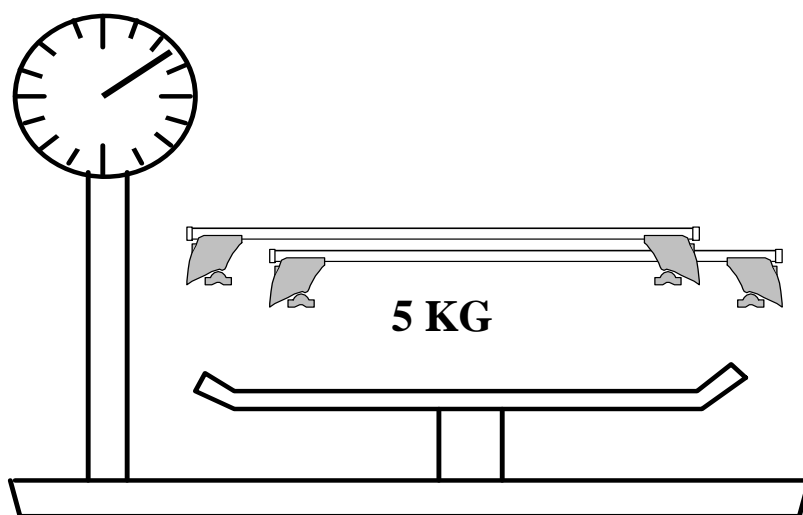

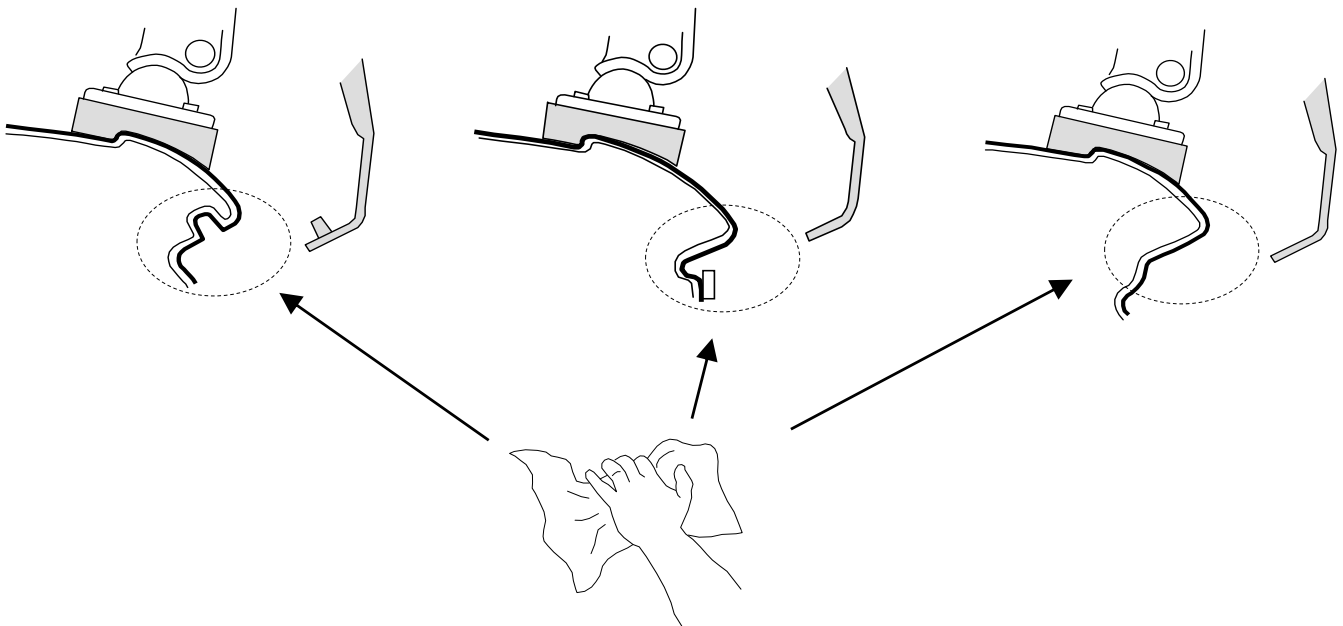
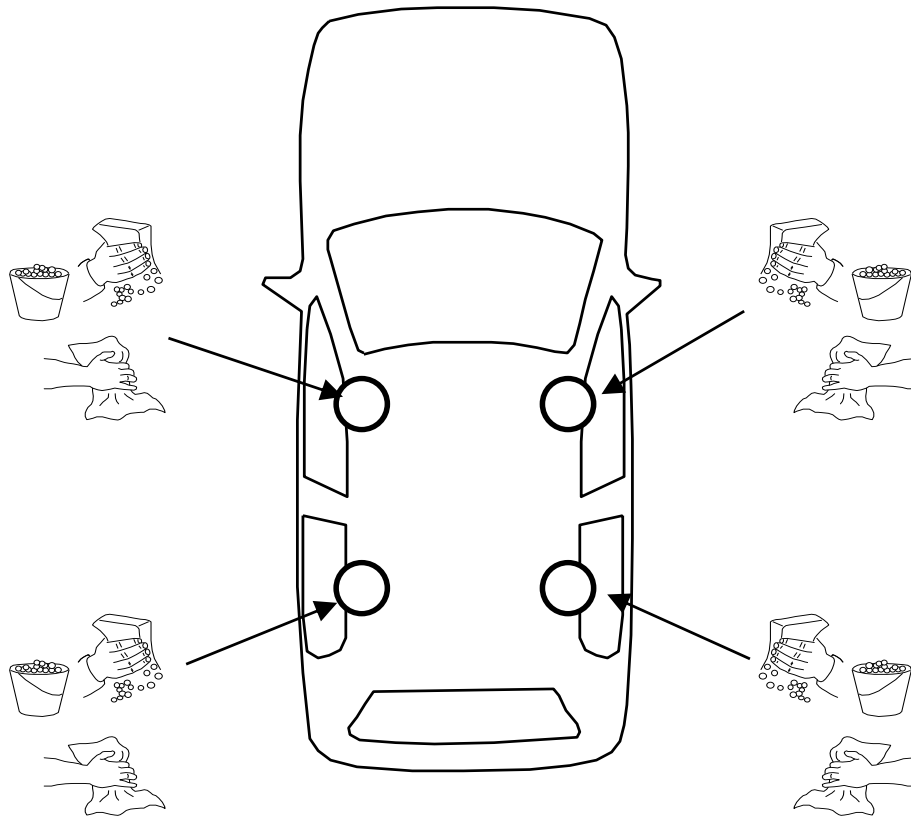



I	Montaggio Barra Anteriore	F	Fixation Barre Avant
PL	Montaż Bagażnika Bazowego Tylnego	GB	Fitting Front Roof Bar
D	Montage Vorderes Dachträgers	NL	Montage Voorste Dakdrager
SWE	Montering Av Främre Lasthållaren	E	Fijación Barra Frontal

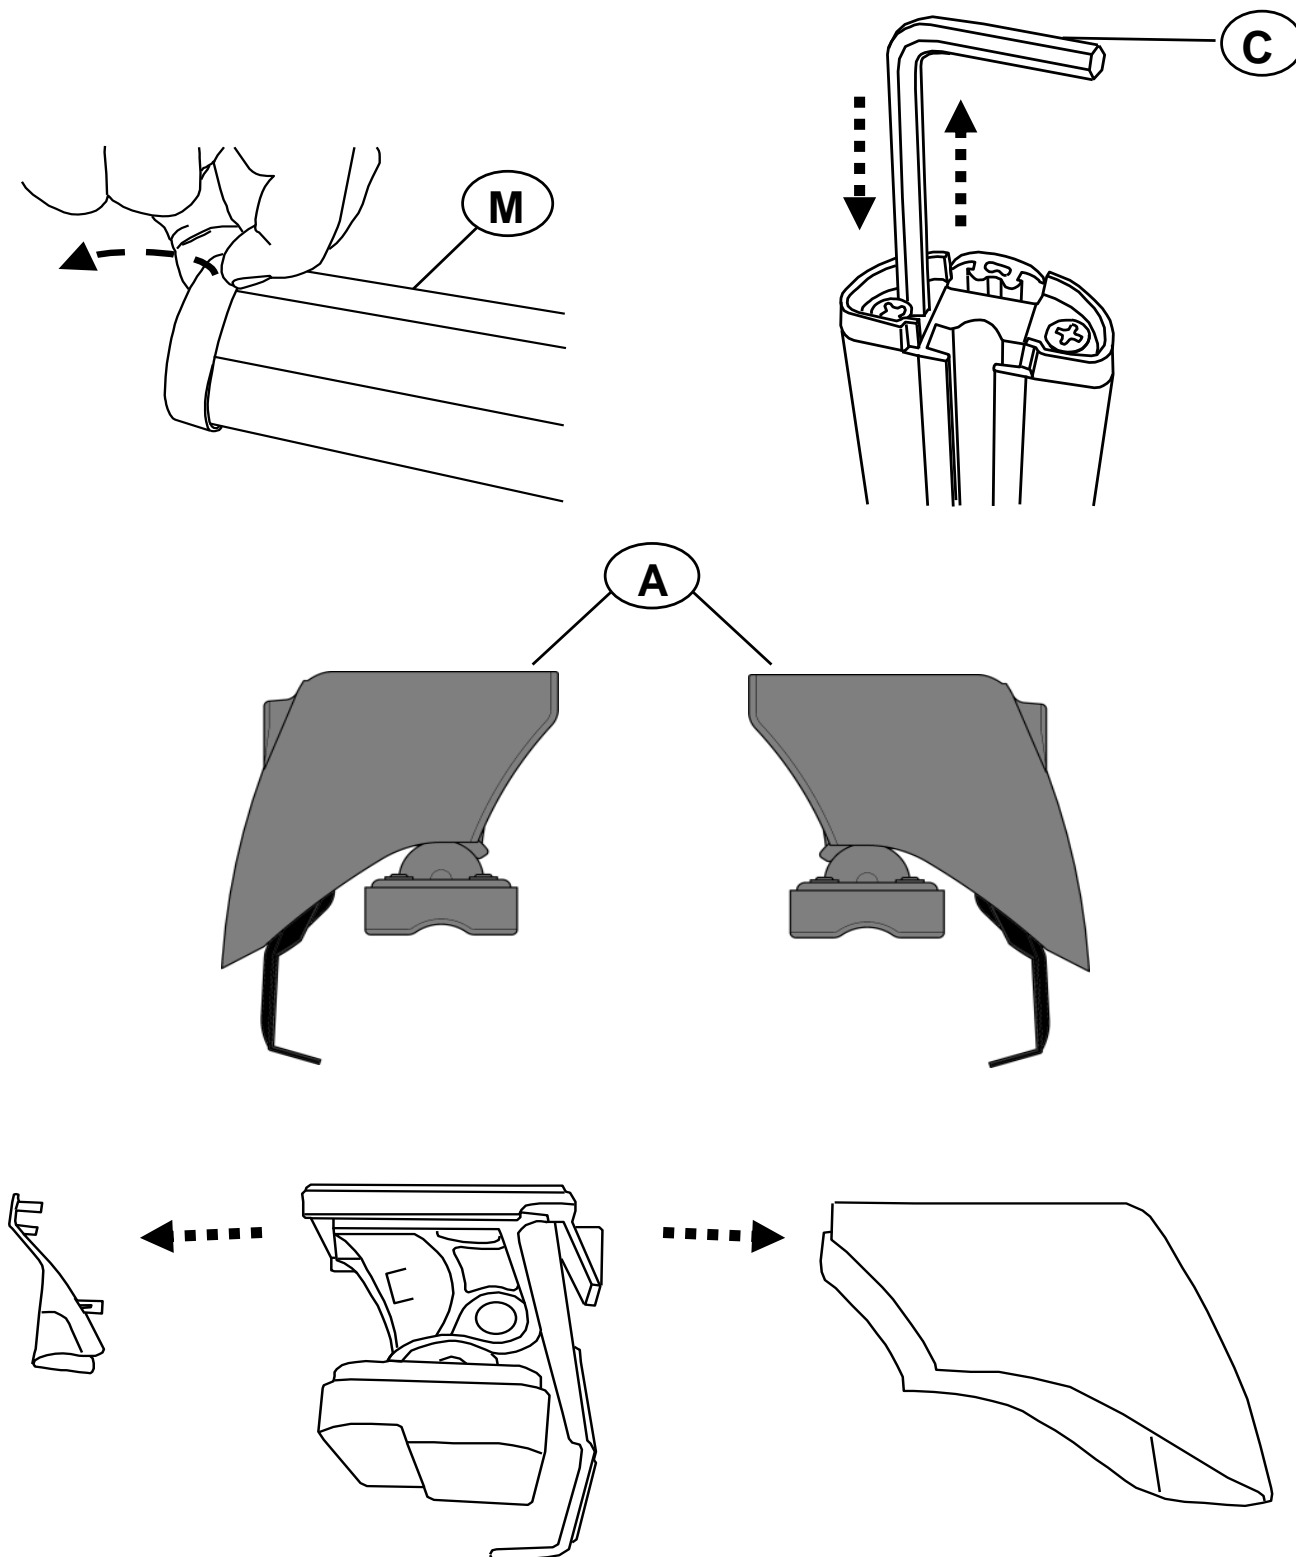











M

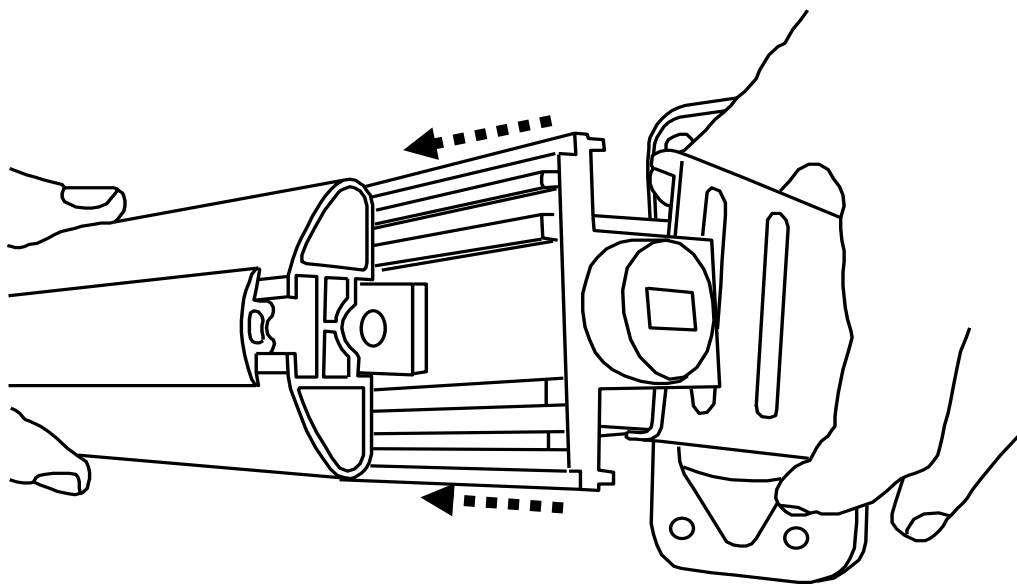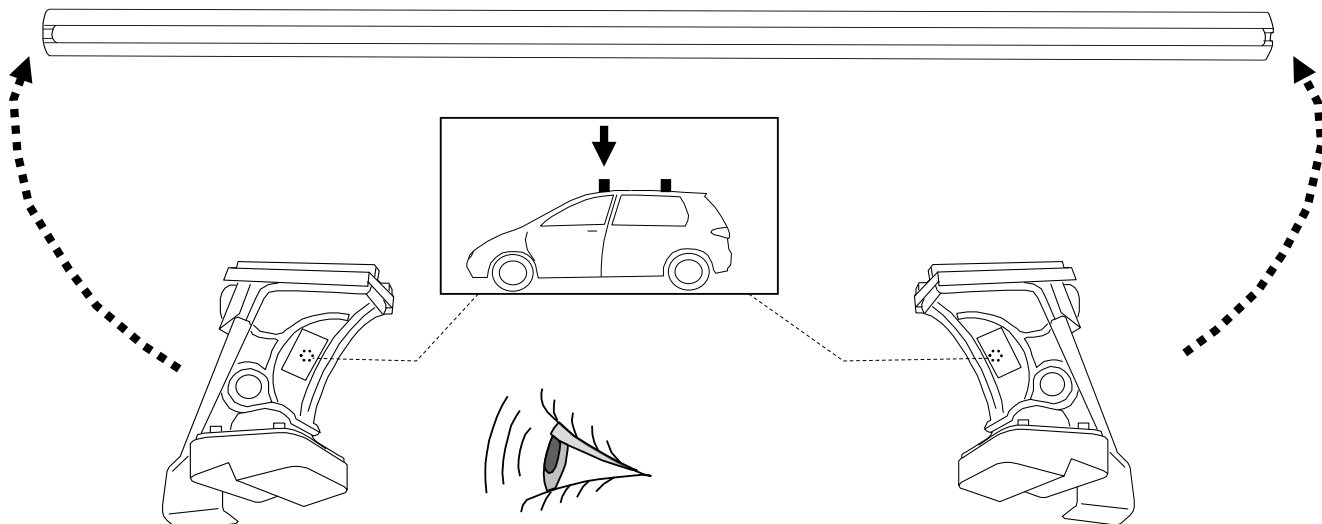

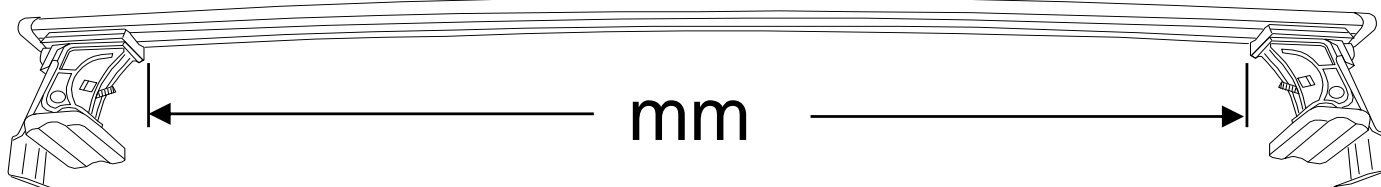



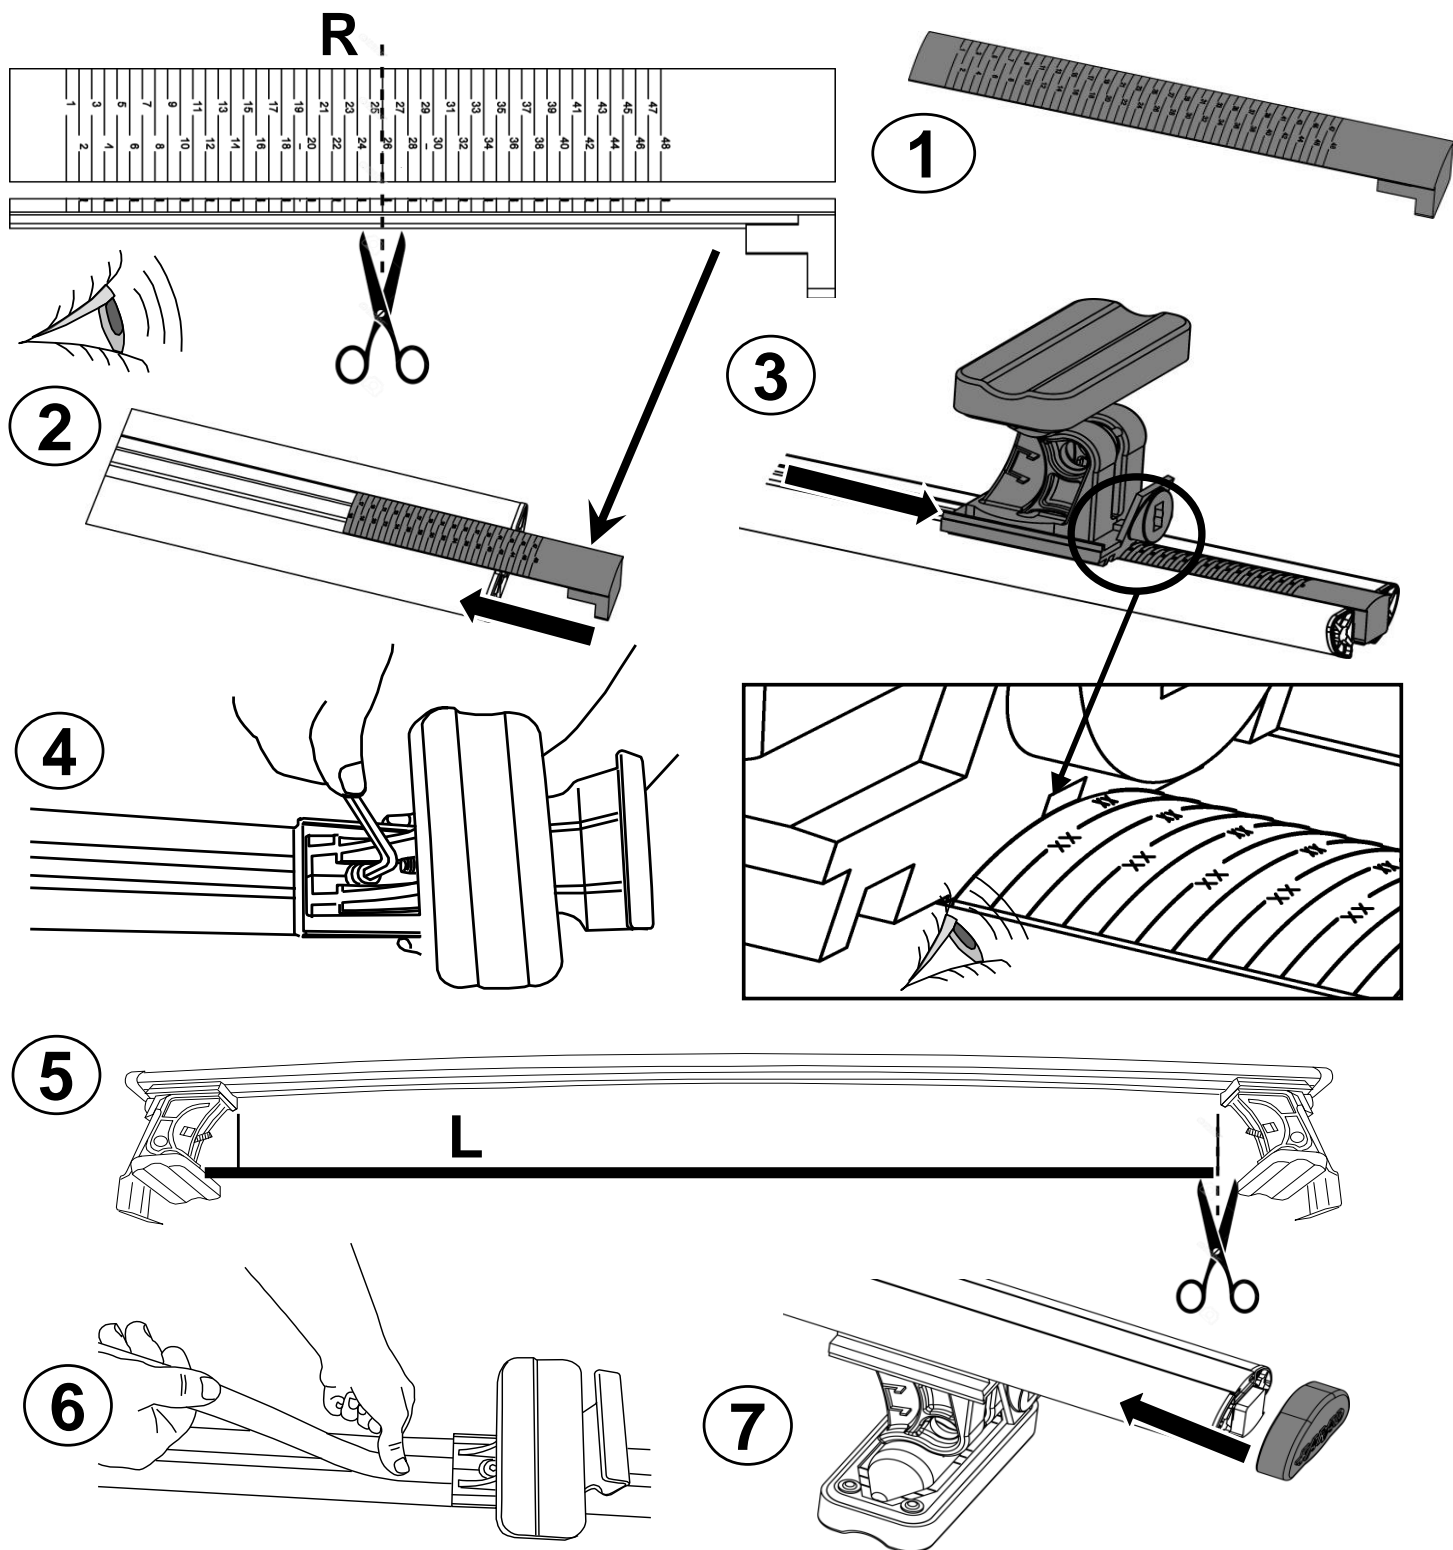


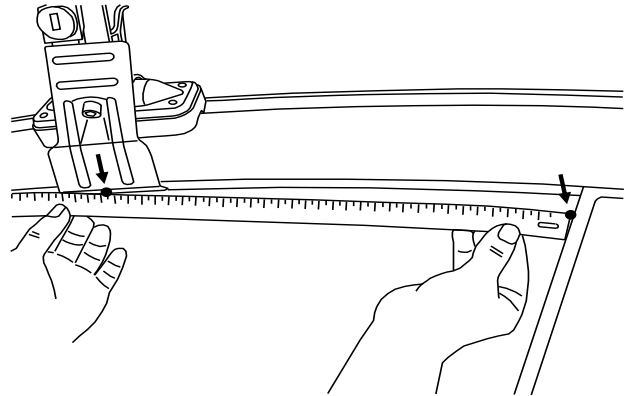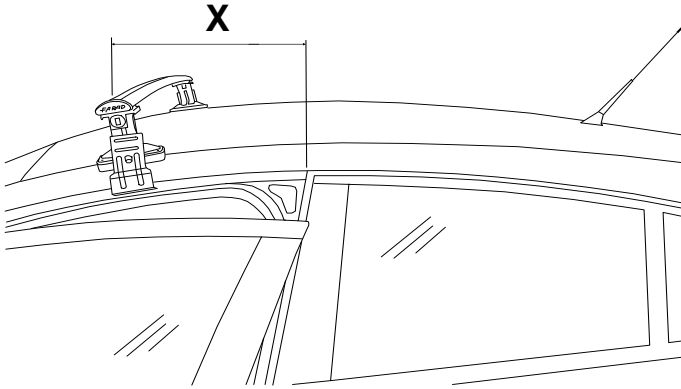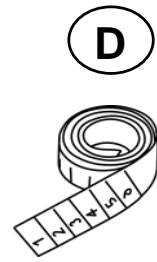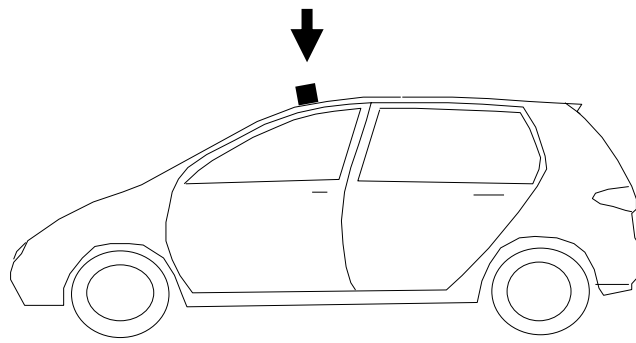			R	mm
SSANGYONG	ACTYON	5	2007>	R= 26 1095








				X
SSANGYONG	ACTYON	5	2007>	X= 250





✓ **4 Nm**



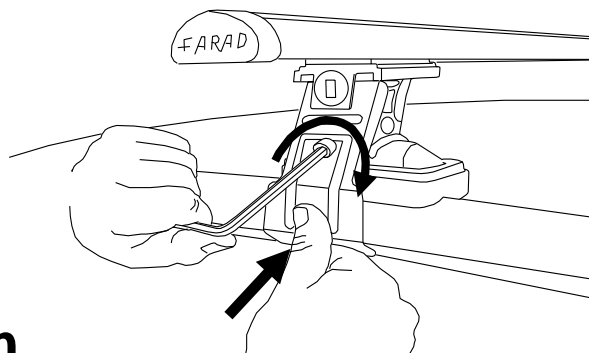




REV 000	10/05/2011	9 / 20
----------------	-------------------	---------------

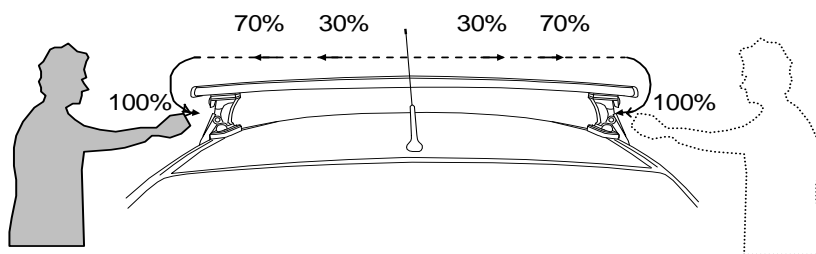

- | | | | |
|----|---|-----|------------------------------------|
| I | Alternare il fissaggio delle viti | F | Serrer alternativement chaque côté |
| PL | Śruby dokręcaj naprzemiennie | D | Die Schrauben abwechselnd anziehen |
| GB | Tighten alternately | E | Apretar alternativamente |
| NL | Afwisselend aan de linker- en de rechterkant aandraaien | SWE | Dra åt växelvis |

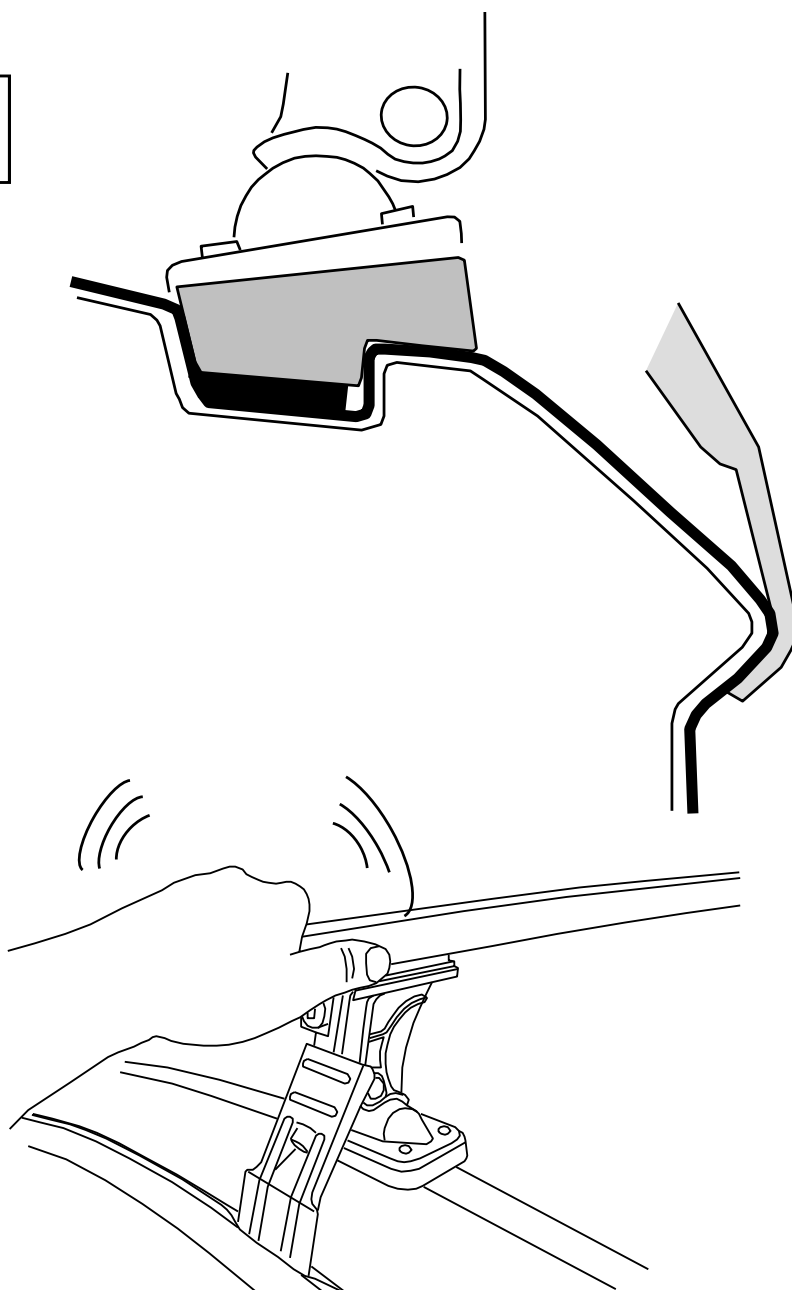

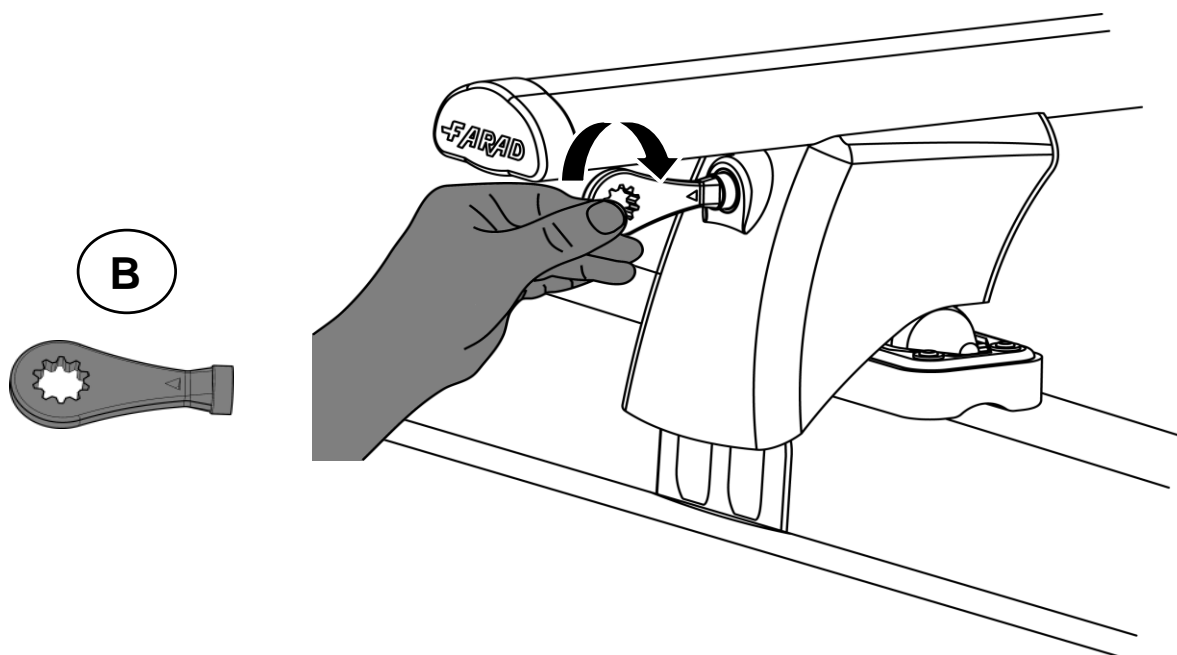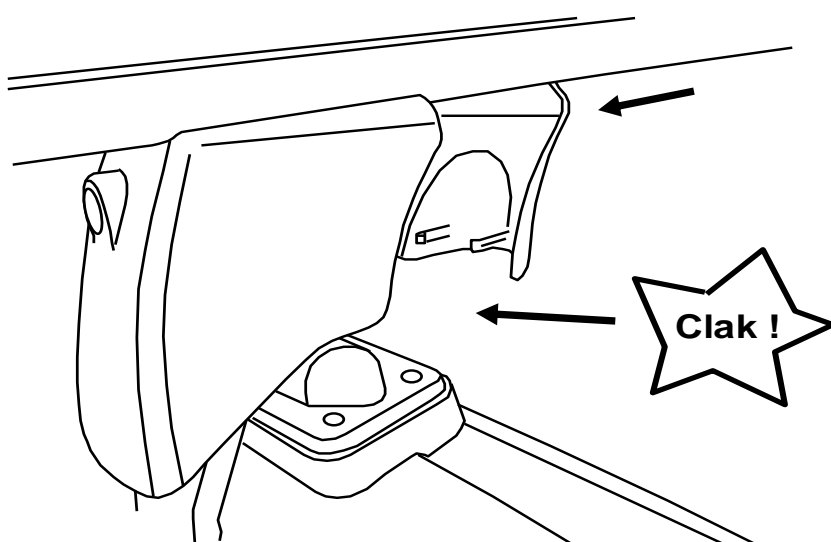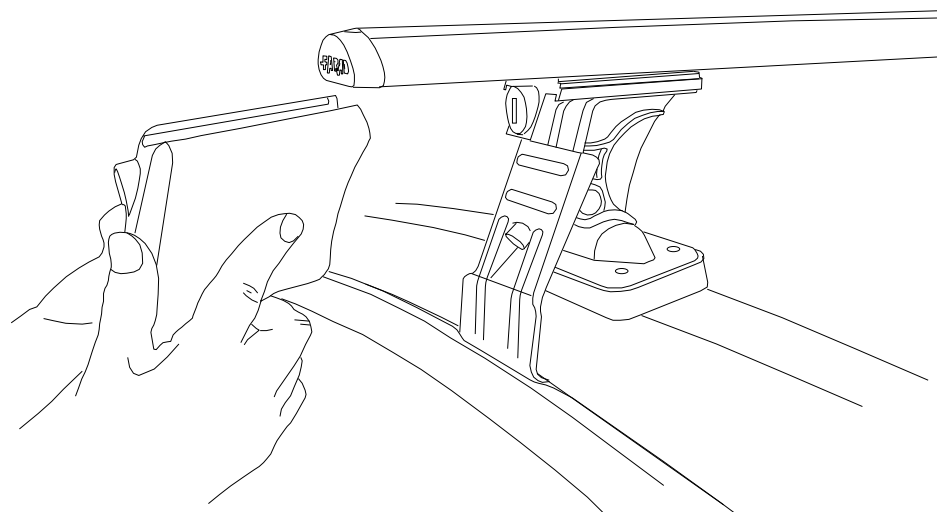

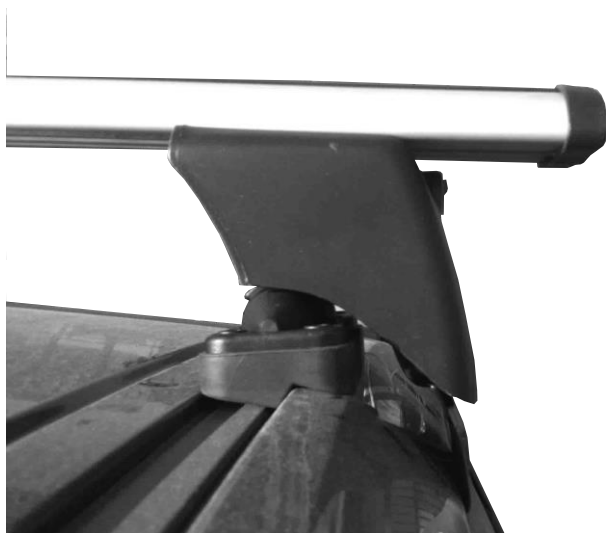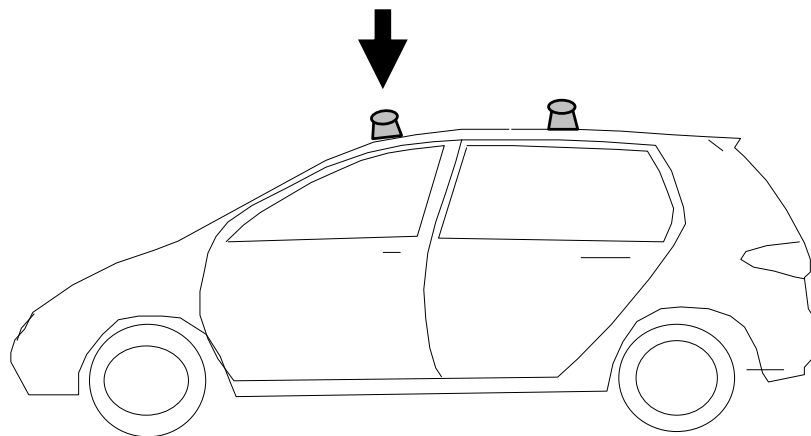

- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
- PL** OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
- GB** CHECK THE SCREW FASTENING PERIODICALLY
- D** REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
- SWE** REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
- F** VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT

I Montaggio barra posteriore

PL Montaż Bagażnika Bazowego Przedniego

SWE Montering Främre Lasthållaren


NL Montage Achterste Dakdrager



F Fixation Barre Arriere


GB Fitting Rear Roof Bar




E Fijación Barra Trasera


D Montage Heckdachträgers



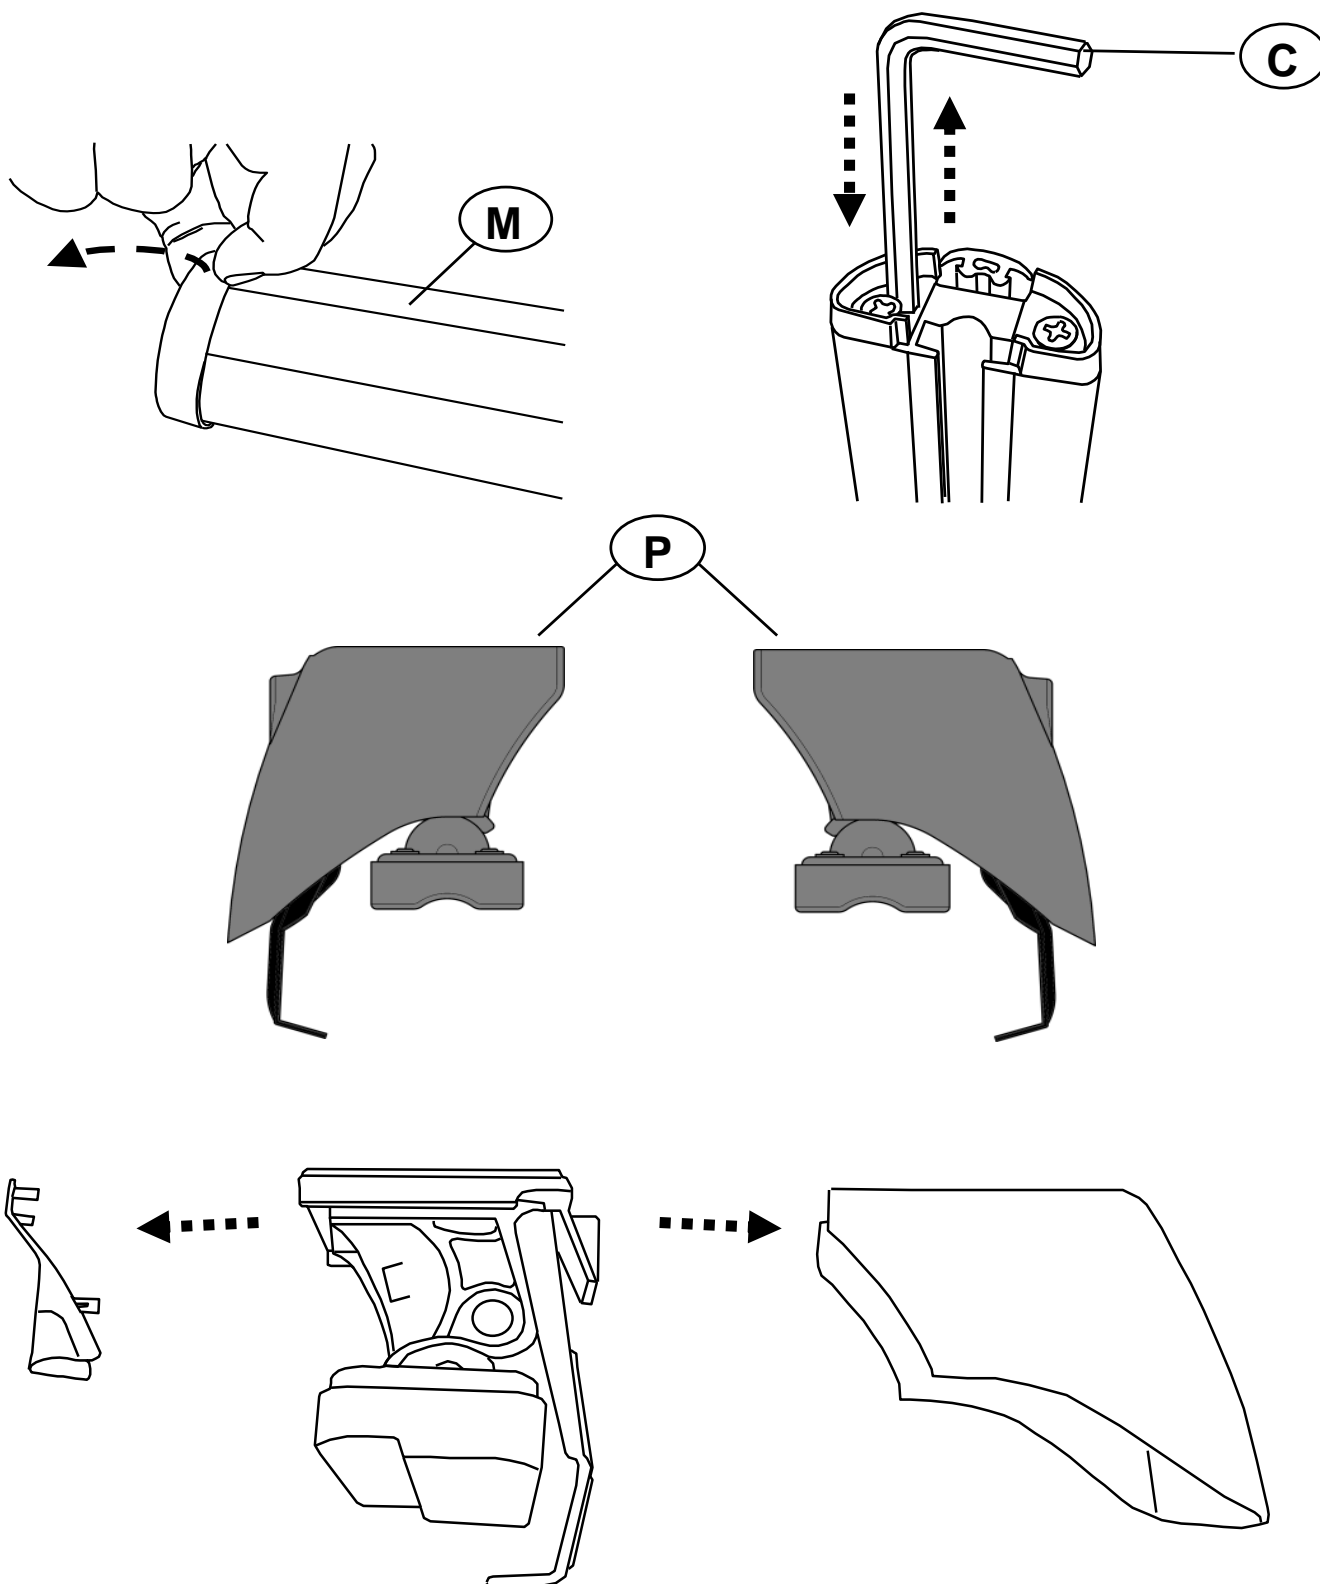


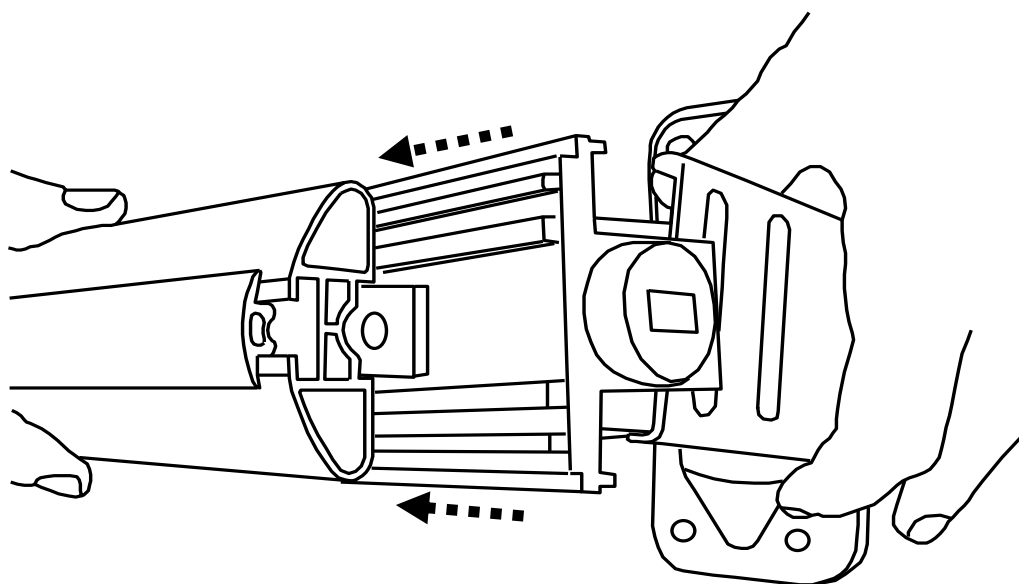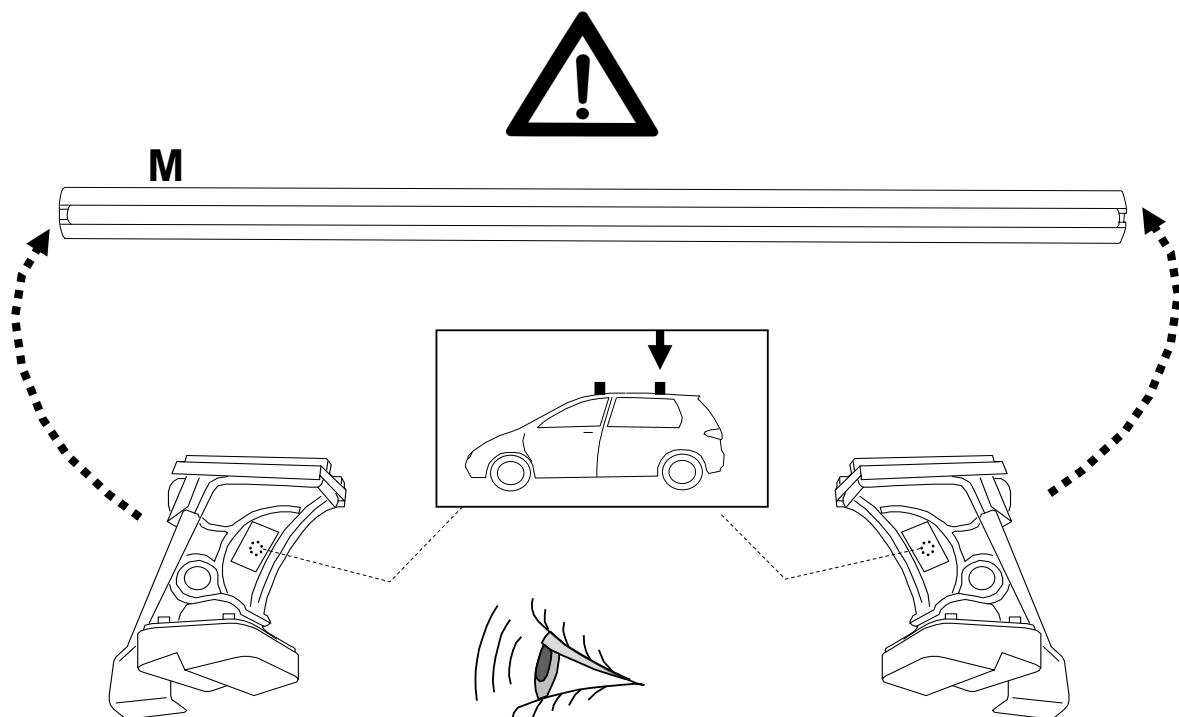




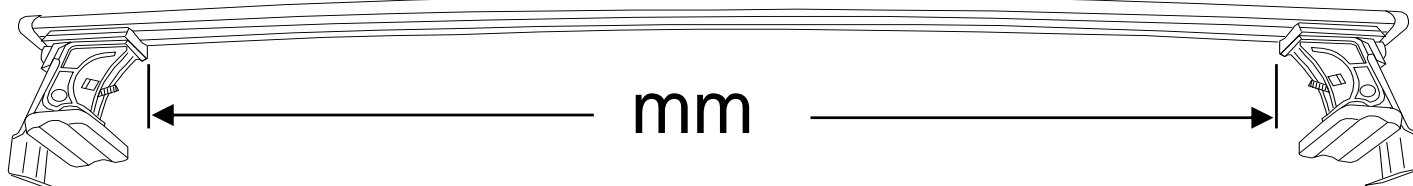


				R	mm
SSANGYONG	ACTYON	5	2007>	R= 20	1065


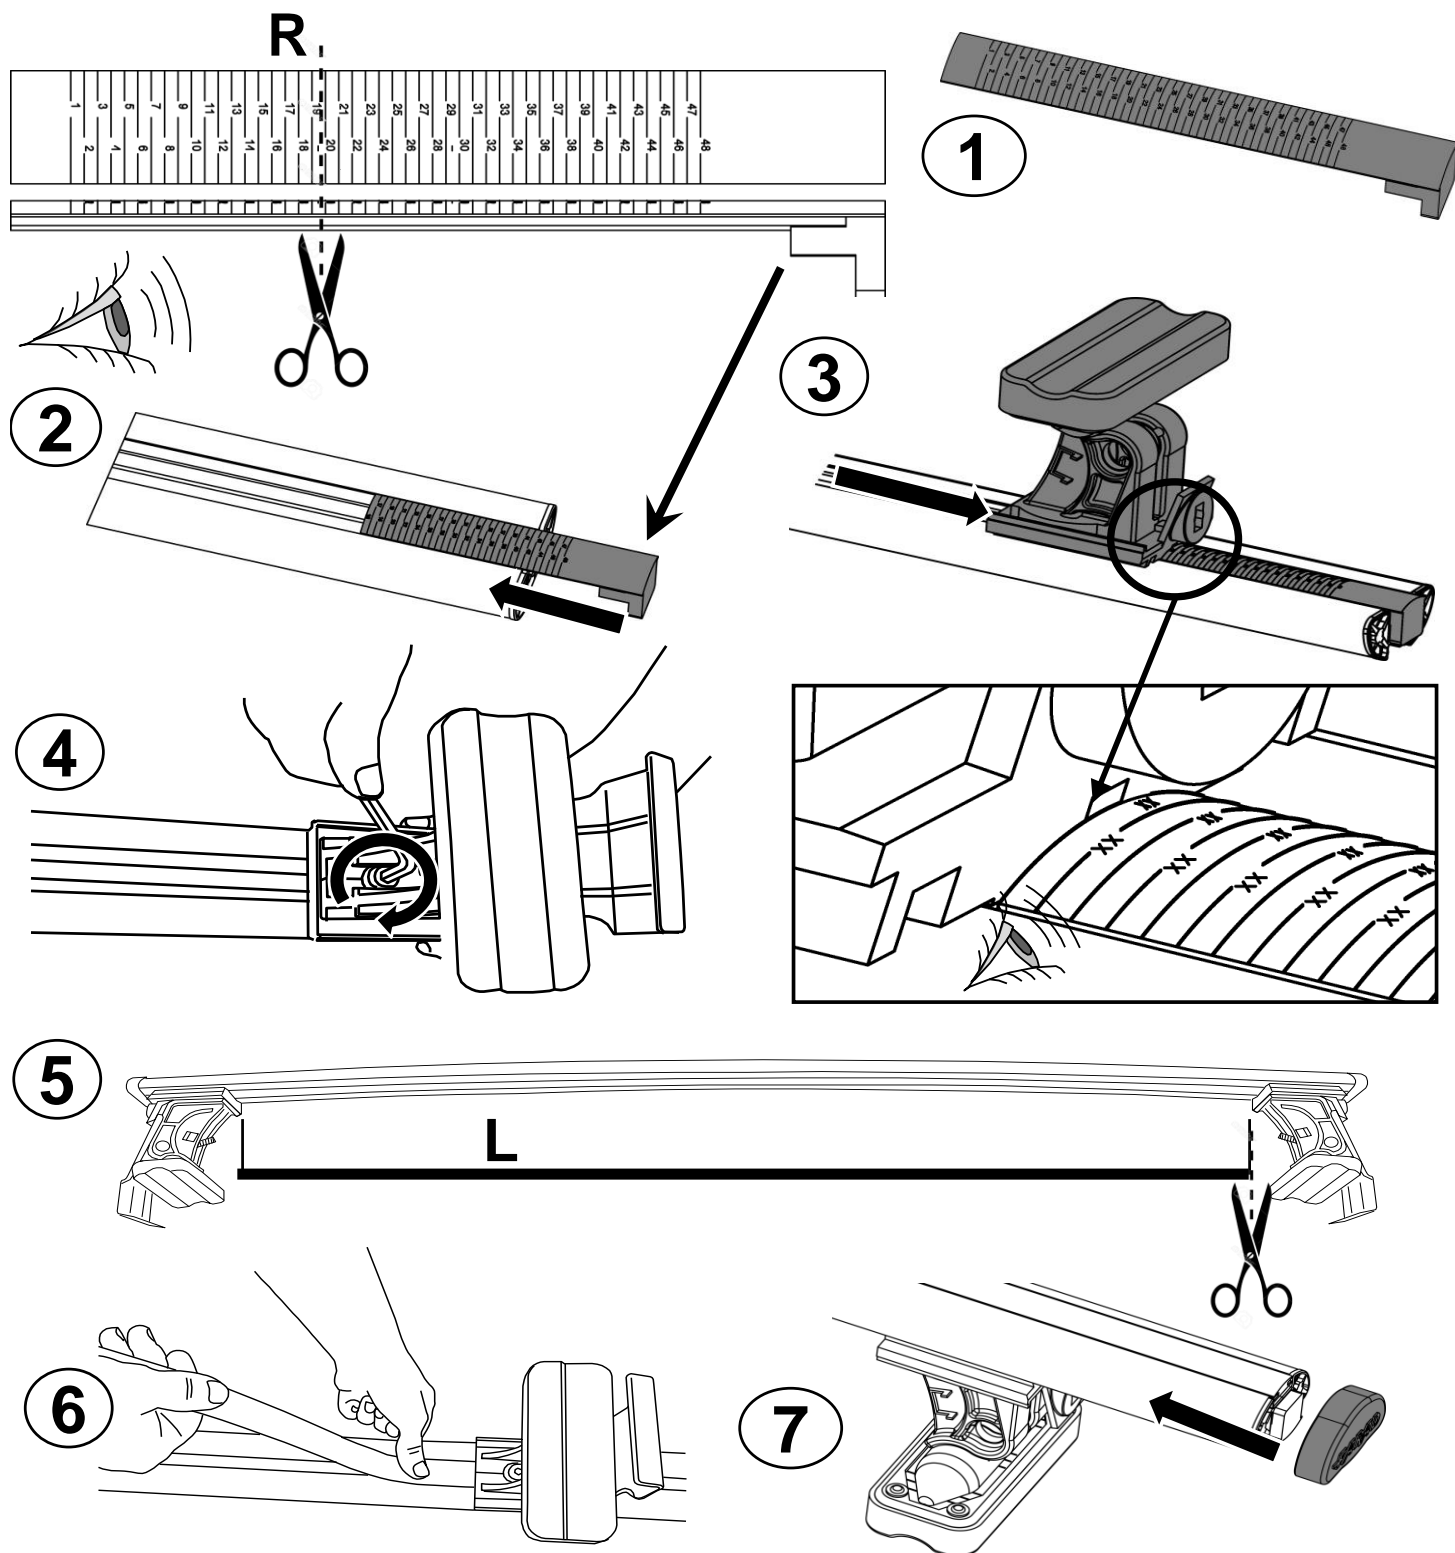


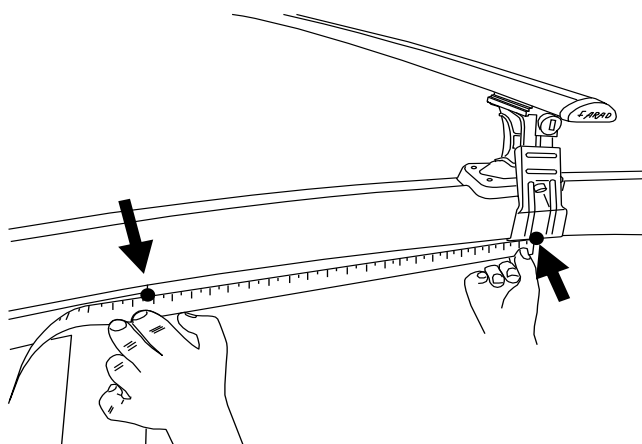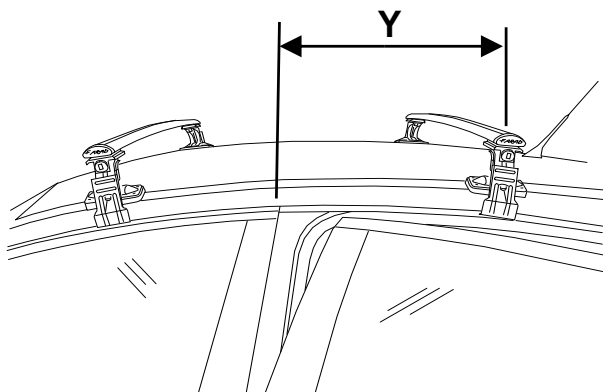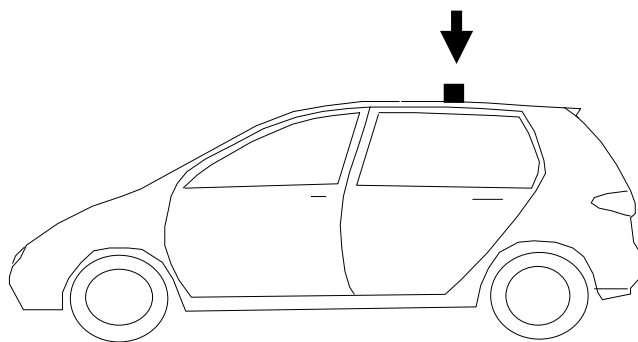


			Y
SSANGYONG	ACTYON	5	Y= 400





✓ 4 Nm



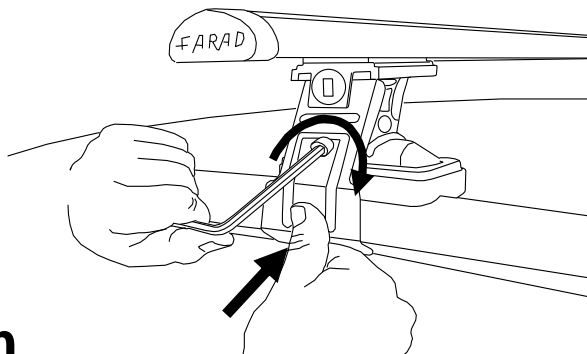




REV 000	10/05/2011	16 / 20
----------------	-------------------	----------------

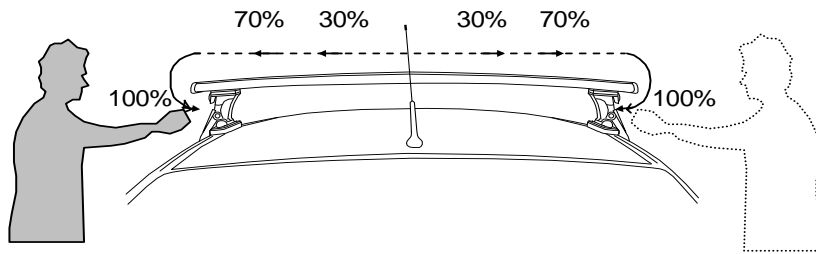

- | | | | |
|----|---|-----|------------------------------------|
| I | Alternare il fissaggio delle viti | F | Serrer alternativement chaque côté |
| PL | Śruby dokręcaj naprzemiennie | D | Die Schrauben abwechselnd anziehen |
| GB | Tighten alternately | E | Apretar alternativamente |
| NL | Afwisselend aan de linker- en de rechterkant aandraaien | SWE | Dra åt växelvis |

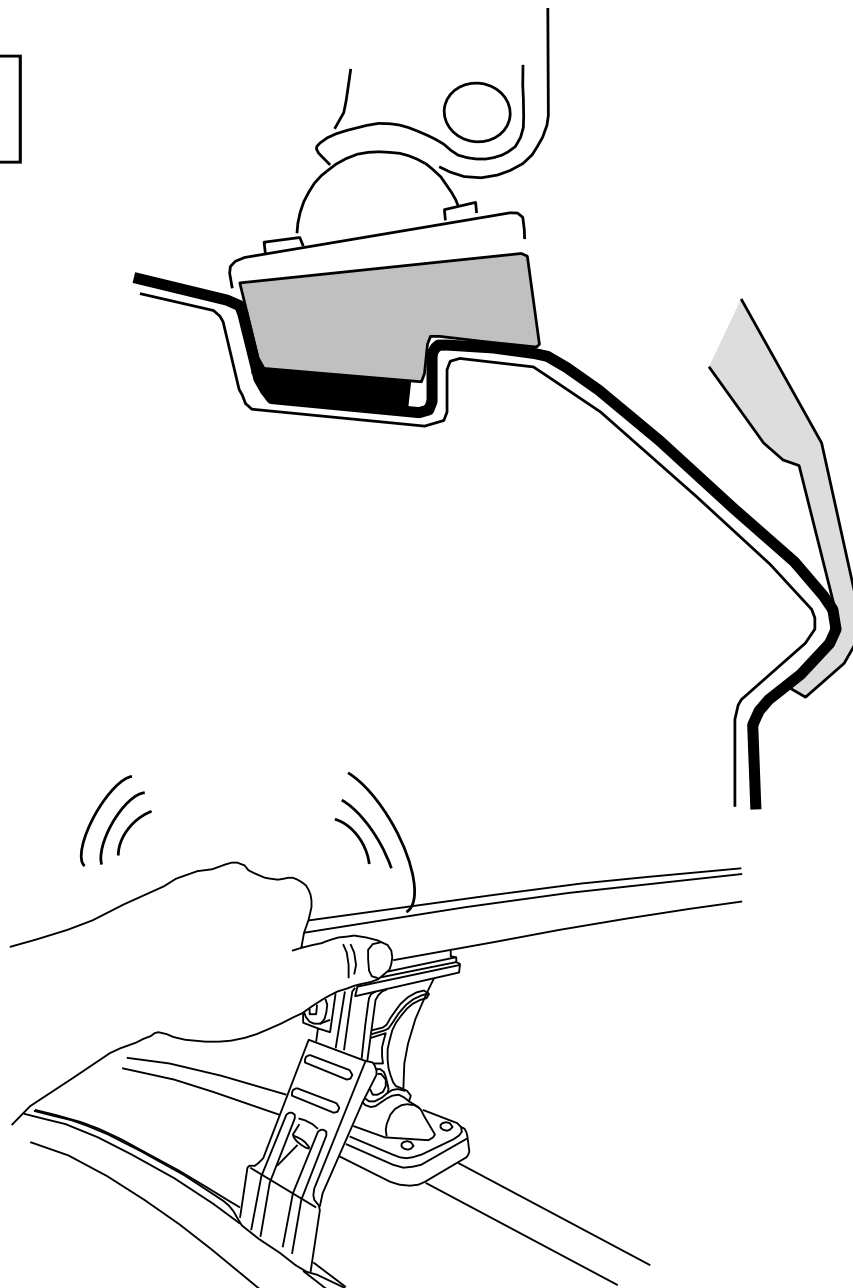

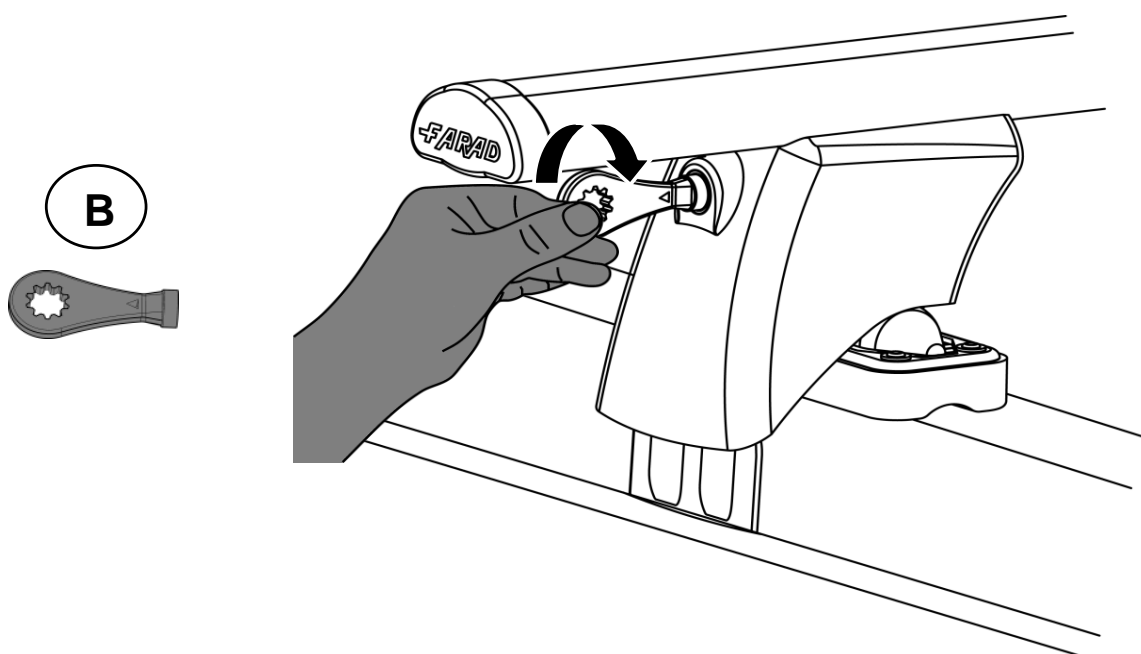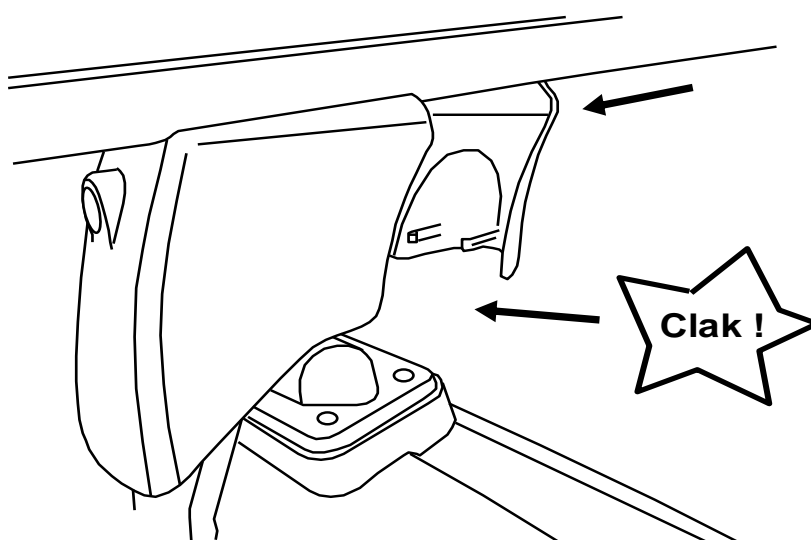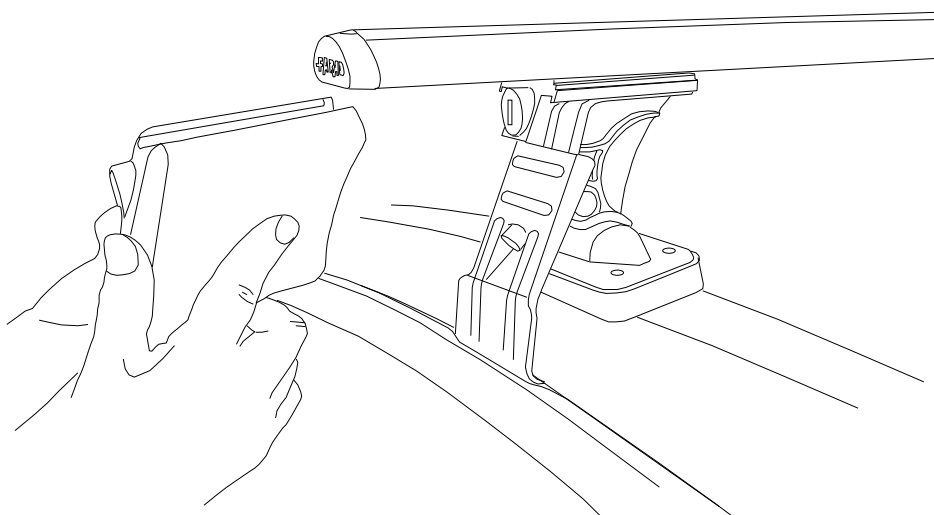

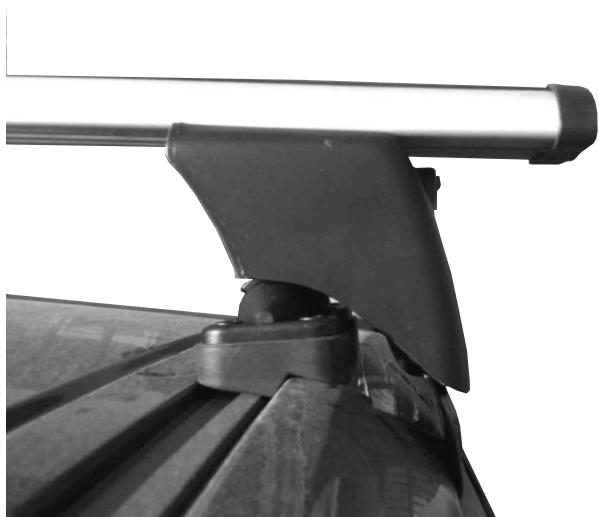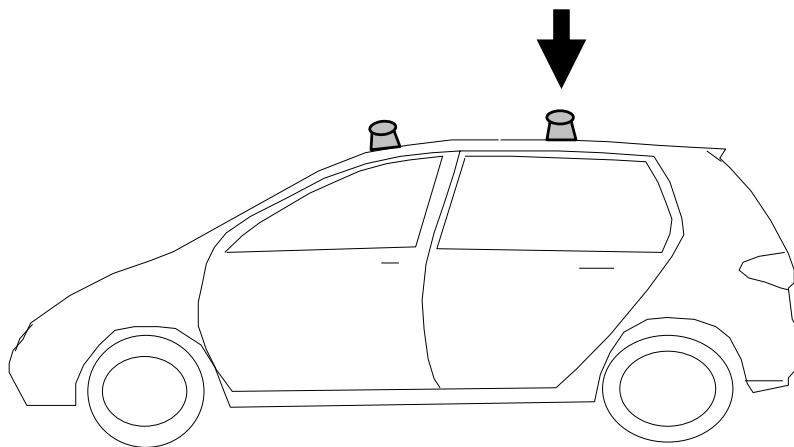


- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
- PL** OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
- GB** CHECK THE SCREW FASTENING PERIODICALLY
- D** REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
- SWE** REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
- F** VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT


RICAMBI - SPARE PARTS




PIEDE GIREVOLE
90341 / 2



PIEDE FISSO
90341 / 15

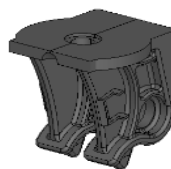

SUPPORTO CENTRALE
90341 / 1



SUPPORTO BARRA
90341 / 5




SOTTO PIEDE SP01
90341 / 3




SOTTO PIEDE SP03
90341 / 16



SOTTO PIEDE SP04
90341 / 13



SOTTO PIEDE SP07
90341 / 11



SOTTO PIEDE SP08
90341/14




SOTTO PIEDE SP10
90341 / 12



SOTTO PIEDE SP12
90341 / 1



CHIAVE ESAGONALE 6
9331 / 148



PIASTRINA
90341 / 21



DISTANZIALE
90341 / 20




NOTTOLINO + N° COMB.
90341 / 6




SOTTOTAPPO
90241 / 9



TAPPO BARRA
90241 / 6

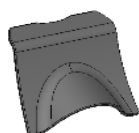


INVOLUCRO POST.
90341 / 9

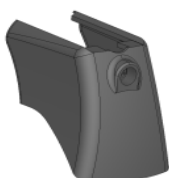

INVOLUCRO ANTERIORE
90341 / 8



CHIAVE + N° COMB
90341 / 7

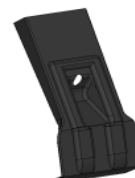

PALETTA
90341 / 4




BARRA ALLUMINIO
90241 / 7




GUARNIZIONE BARRA
90241 / 8



RIGA CARTA
90341 / 19



PERNO
90241 / 15



**GUARNIZIONE
NUMERICA**
91141 / 14

FARAD[®]
made in italy

tel. 011 9713719 - n° verde 800984229
www.faradworld.com